

# USB DRIVER INSTALLATION INSTRUCTIONS

1. Run the file "CP210X\_VCP\_Windows  
(Unpack and run X64 or X86 depending on which computer you have.

2. Accept the Security Warning if any.


3. Click next on the Welcome screen

4. Accept the Licence Agreement

5. Accept the Destination Location

6. Install ok

7. Launch ok and finish

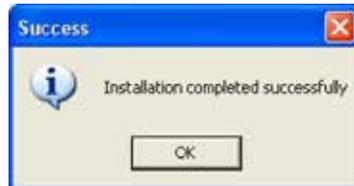

8. Restart your computer

9. Connect the USB cable to the computer.

10. Windows see the Silicone Labs com port

11) To see which com port it is, go to:

- Control patern
- Setup
- Hardware
- Device Manager
- Ports, com port

Start your pattern software and select the right Com port

Start Weaving

For any problem, please contact:  
[info@leclerclooms.com](mailto:info@leclerclooms.com)

