


COMPACT 24" NEW IMPROVE BRAKE KIT


1573 Savoie C. P. 4 Plessisville, Qc. G6L 2Y6

TEL: 819-362-7207 FAX: 819-362-2045

www.leclerclooms.com info@leclerclooms.com



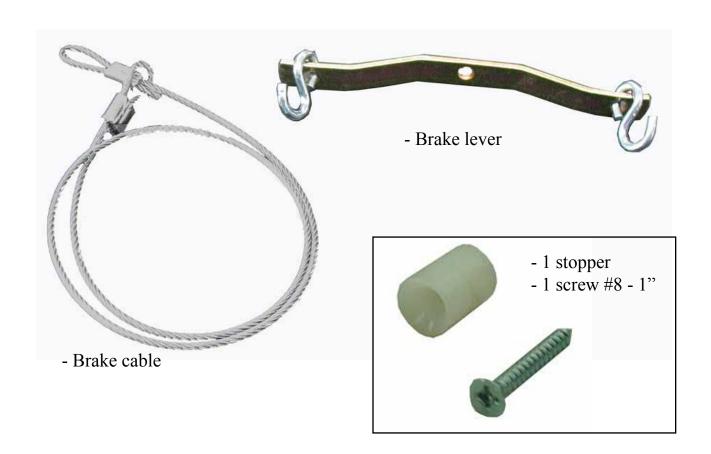

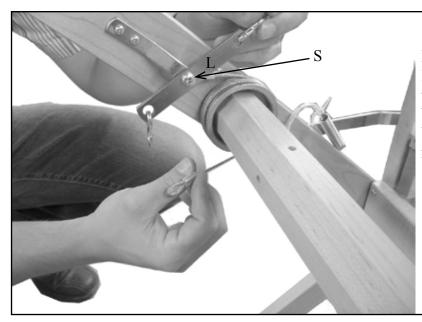

Disconnect from the brake lever L the loop cord spring, the pedal loop cord and the brake cable.

Unscrew completely the lever round head screw S



Install the new long lever with the new longer brake cable.


Make sure the brake lever is as the picture with the S hook facing down.




Unroll (unpack) the brake cable. Turn clockwise 3 times around the brake drum starting at the top.

Join the end of the cable to the back "S" hook of the brake lever.

Join the brake loop cord to the Back "S" hook using the best possible loop so the brake treadle will be at the desired height.

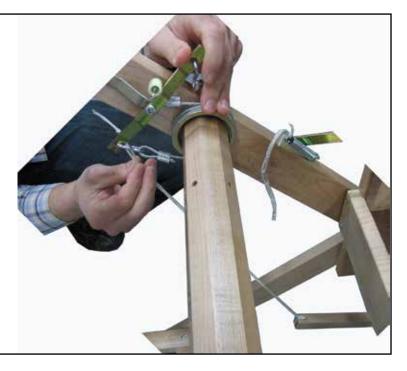

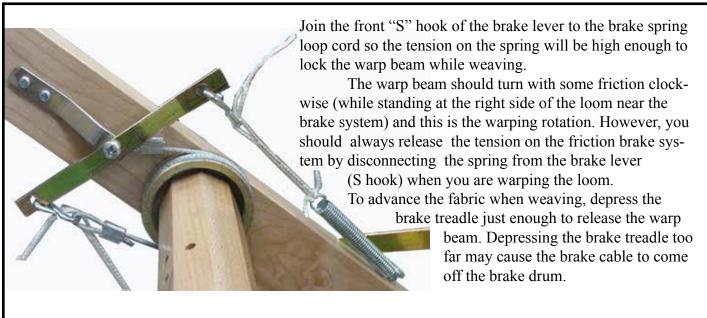

Brake stopper Compact 24"

To avoid the brake cable to unroll if the treadle break if pushed to much we can add a stopper.

Using a drill bit 7/64" make a hole at 5 1/8" from the top of the leg and at 5/16" from the side. Screw in place the platic stopper using the #8 - 1" screw.

